


TRANSMITTING ANTENNA DISSIPATOR  
MODEL TMC TER-3500

600 Ohms.

1750 Watts.

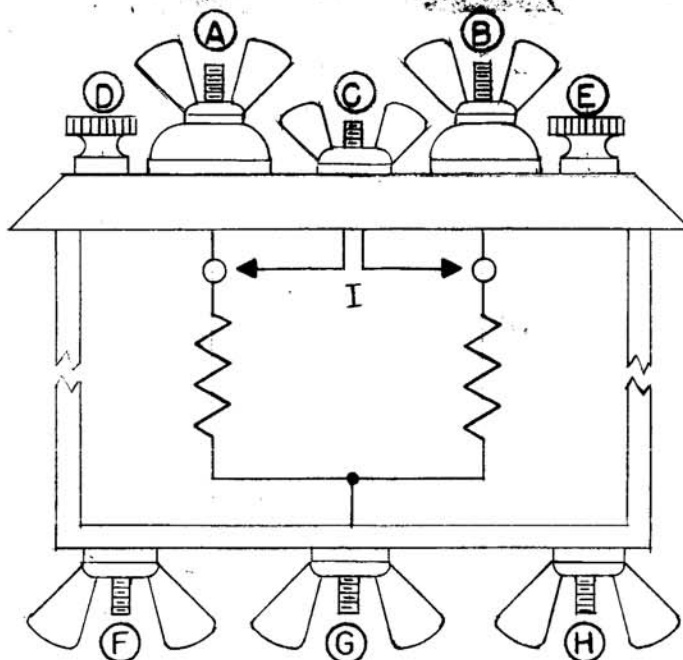

OPERATING INSTRUCTIONS

1. BALANCED ANTENNA TERMINALS AT (A) AND (B).
2. LIGHTNING PROTECTIVE GROUND AT (C).
3. CENTER OF LOAD GROUNDED VIA (G) IF DESIRED.
4. LIGHTNING CAPS (ADJUSTABLE) AT (I).

MAINTENANCE

1. REMOVAL OF RESISTOR ASSEMBLY.

REMOVE TWO (2) THUMB SCREWS (D) AND (E) ON CASE COVER AND TWO (2) WING NUTS (F) AND (H) ON CASE BOTTOM. THE INNER ASSEMBLY IS THEN REMOVED BY LIFTING CASE COVER.

2. PROTECTION.

ENTIRE RESISTOR ASSEMBLY SHOULD BE GIVEN A COATING OF SILICONE VARNISH (DOW CORNING # 997) YEARLY IN TEMPERATE AREAS AND BI-YEARLY IN TORRID AREAS.

*Handwritten signature or initials*

IN-100