
MASTER COPY DO NOT DESTROY

TECHNICAL MANUAL for

TRANSMITTING ANTENNA DISSIPATOR AND DUMMY LOAD

MODEL TER-18K(50)3E5

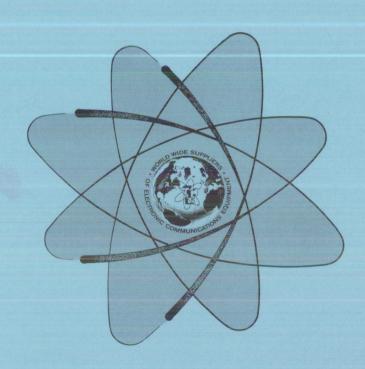

THE TECHNICAL MATERIEL CORPORATION


MAMARONECK, N.Y. OTTAWA, ONTARIO

COPYRIGHT 1971
THE TECHNICAL MATERIEL CORPORATION

TECHNICAL MANUAL for

TRANSMITTING ANTENNA DISSIPATOR AND DUMMY LOAD

MODEL TER-18K(50)3E5

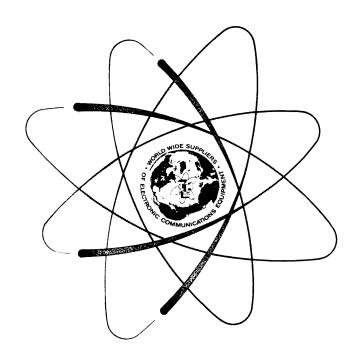

THE TECHNICAL MATERIEL CORPORATION

MAMARONECK, N.Y. OTTAWA, ONTARIO

COPYRIGHT 1971
THE TECHNICAL MATERIEL CORPORATION

Printed in U.S.A.

Issue Date:

NOTICE

THE CONTENTS AND INFORMATION CONTAINED
IN THIS INSTRUCTION MANUAL IS PROPRIETARY
TO THE TECHNICAL MATERIEL CORPORATION
TO BE USED AS A GUIDE TO THE OPERATION
AND MAINTENANCE OF THE EQUIPMENT FOR
WHICH THE MANUAL IS ISSUED AND MAY NOT
BE DUPLICATED EITHER IN WHOLE OR IN
PART BY ANY MEANS WHATSOEVER WITHOUT
THE WRITTEN CONSENT OF THE TECHNICAL
MATERIEL CORPORATION.

Addendum to Technical Manual for TER-18K-C-50U IN-8009F

Transmitting Antenna Dissipator and Dummy Load Model TER-18K(50)/3E5

The TER-18K(50)/3E5 is a new model number for the TER-18K-C-50U. The Technical Manual for the TER-18K-C-50U may be utilized by changing all model number references to TER-18K(50)/3E5.